

Information

PriorityStart! does not put life back into a battery – it is not a battery booster. If possible install **PriorityStart!** on a new battery.

TO TEST: attach per owner's manual. Turn headlights on and let lights take voltage down to disconnect threshold, make sure key is out of ignition (DO NOT use any accessories i.e. power supply, test-bench equipment, engine fans, light bars, etc., to obtain quick discharge of battery).

Use a voltage meter to monitor voltage. When voltage is below 11.9 volts for one full minute **PriorityStart!** will disconnect. After disconnecting, wait one full minute to reconnect. **PriorityStart!** automatically reconnects by operating the headlight switch and/or stepping on the brake pedal.

Troubleshooting

Problem: **PriorityStart!** disconnects battery power too often.

- An accessory is unintentionally left on.
- Ground connection requires attention. Make sure that ground terminal is firmly secured to a clean surface.
- Post adapter needs tightening.
- Corrosion buildup on battery terminals or cables. Clean per battery instructions.
- Battery is weak, needing replacement; bad battery cable.
- There is a short circuit in the vehicle electrical system.

Problem: Battery is dead.

- Ground connection may require attention.
- Battery may need replacement.

Problem: Vehicle cable not long enough to install unit.

- Purchase after-market cable. Available at auto parts stores.

Maintenance

- Keep connections tightly fastened and clean from corrosion.
- Battery cables may be sprayed with corrosion inhibiting products.
- Care for the unit the same as your vehicle battery.
- PriorityStart!** can be disconnected by unplugging the ground wire. The battery is *still* connected.
- A vehicle should be started at least every 60 - 90 days and engine run for 15 minutes to offset normal battery discharge.

Technical Specifications

- Operates on 12-volt Neg. (-) or Pos. (+) ground system, when installed per instructions.
- Temperature range: -40°F to +185°F.
- U/L Tested, ISO, SAE, USCG Certified. The Product herewith complies with the Requirements of 73/23/EEC and 89/336/EEC, and carries the CE mark accordingly.

P/N BLI 069601 Rev. 11/02

Warranty

Your **PriorityStart!**® is covered by a conditional, limited warranty to the original purchaser. Your **PriorityStart!** is warranted to be free from defects in materials and workmanship under normal use and conditions for a period of 12 months from the date of original purchase (proof of purchase required). If your **PriorityStart!** unit malfunctions or fails within the aforementioned warranty period because of a defect in materials and workmanship, we will repair or replace it at our discretion. The **PriorityStart!** owner is responsible for costs to upgrade any part replacements. A warranty return must be sent freight and insurance prepaid with a copy of this Warranty Certificate and a proof of purchase to BLI International Division of Baton Labs, Inc. at its address listed below. Labor for removal and installation of the product is at owners expense.

This Warranty is valid only for a **PriorityStart!** purchased in the U.S. This warranty does not extend to any defect, malfunction, or failure caused by misuse, abuse, improper installation (including disassembly of **PriorityStart!**), use of the product with equipment for which it was not intended, or unauthorized alterations or repairs.

This Warranty is the sole and exclusive express warranty given with respect to **PriorityStart!** and all other express warranties are hereby excluded. No one is authorized to assume any liability on behalf of BATON LABS, INC. or impose any obligation on it in connection with the sale of this product other than outlined above.

NEITHER BATON LABS, INC. NOR THE DEALER WHO SELLS **PriorityStart!** IS RESPONSIBLE FOR INDIRECT, INCIDENTAL, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF OR INABILITY TO USE THIS PRODUCT. EXCEPT FOR THIS LIMITED WARRANTY, THE MANUFACTURER HAS NOT MADE, AND SPECIFICALLY DISCLAIMS, ANY WARRANTY OR REPRESENTATION OF ANY KIND, EXPRESS OR IMPLIED, DIRECT OR INDIRECT, OF PRODUCT FITNESS FOR A PARTICULAR PURPOSE.

Any claims to this warranty must be brought within 1 year. If any portion of this warranty or limitation of rights and remedies is found to be unenforceable, then the remainder of this document shall remain in full force and effect. California law shall govern all claims.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have rights that vary from state to state.



BLI International
Division of Baton Labs, Inc.
17939 Chatsworth St., Suite 521
Granada Hills, CA 91344
Tel (818) 363-5390
Fax (818) 832-9431
Web www.prioritystart.com
E-mail prioritystart_bli@hotmail.com

PriorityStart!®

Automatic Battery Power Protector


OWNERS MANUAL

PriorityStart! attaches easily to any type of standard 12-volt vehicle battery. No vehicle modifications are necessary. Will NOT disconnect battery power when the engine is running.

How **PriorityStart!** Works

PriorityStart! stops dead batteries *AUTOMATICALLY* before damage occurs. Constantly monitors voltage; senses any voltage drain, and *AUTOMATICALLY* disconnects the drain, leaving starting power. *AUTOMATICALLY* reconnects your battery when you operate the headlight switch and/or step on the brake pedal. Computer chip technology. Universal design fits top or side-post batteries. Fits any 12-volt application. *No similar product on the market.*

No Hard Wiring Required

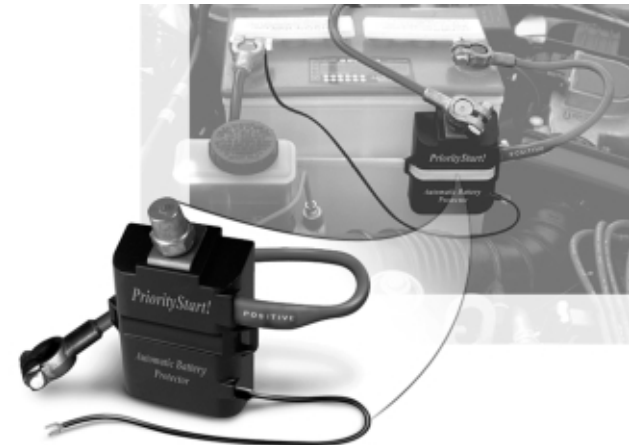


PriorityStart! Battery Protection System

is protected by one or more of the following:
U.S. Patent Nos. 5,200,877; 5,296,788; 5,296,997; 5,949,157
and patented abroad.

PriorityStart! is a registered trademark of Baton Labs, Inc.

PriorityStart!® Parts List

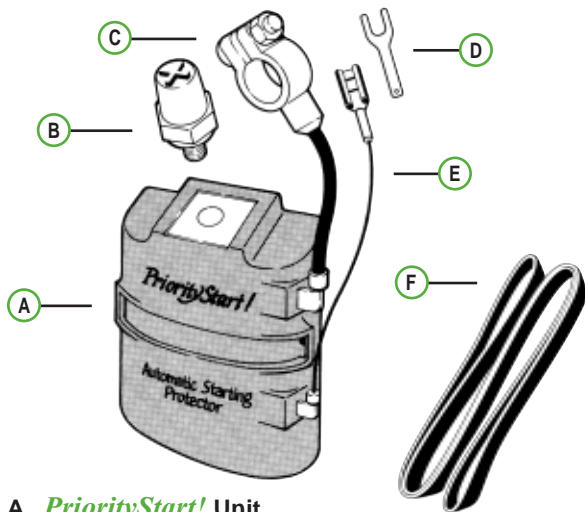

- A. **PriorityStart!** Unit
- B. **Post Adapter**
- C. **PriorityStart!** Pos. (+) Red Cable
- D. **U-Clip**
- E. **PriorityStart!** Ground Wire
- F. **Attachment Band**

Preliminary Instructions

PLEASE READ ENTIRE INSTRUCTIONS BEFORE installation and follow sequence exactly. If your battery has previously discharged its power (deep discharge) you probably need to replace it before installation.

{ Engine off; accessories off and key out of ignition – key left in 'on' position may cause unit to become inoperative. High amp devices (lightbars, rotating lights) should not be operated when engine is off.

{ Disconnect existing cables from battery: **First** Neg. (-) then Pos. (+). **WARNING:** Batteries produce explosive gases. Cover with cloth before removing cables. **ALSO:** Clean battery terminals. Do not connect to corroded cable or battery post.

{ Locate unit so that vehicle Pos. (+) cable can reach Post Adapter (ITEM B) [See Fig. 4].

IMPORTANT: DO NOT allow **PriorityStart!** Red Cable (ITEM C) to contact battery post or cable until instructed.

Make sure **PriorityStart!** Post Adapter (ITEM B), once installed, will not contact closed hood.

Top-Post Installation

1 Using a 7/8" wrench, tighten Post Adapter (ITEM B) firmly into top of **PriorityStart!** [Fig. 1]. (Torque @ 7-10 ft./lb. - Do not overtighten)

2 Install Band (ITEM F) around battery. **DO NOT** place **PriorityStart!** under Band at this time.

3 Reconnect Neg. (-) battery cable to Neg. battery post and install U-Clip (ITEM D) securely to assembly [Fig. 2]. **DO NOT** connect Ground Wire (ITEM E) to U-Clip at this time.

4 Connect vehicle Pos. (+) cable securely to **PriorityStart!** [Fig. 3].

5 Connect **PriorityStart!** Red Cable (ITEM C) securely to Pos. (+) terminal post on battery [Fig. 3].

6 Place **PriorityStart!** under Band (ITEM F). Unit can be installed in vertical or horizontal position [Fig. 4].

7 Connect **PriorityStart!** Ground Wire (ITEM E) to previously installed U-Clip [Fig. 5].

As Final Step, Ground Wire is Connected to U-Clip

PriorityStart!
IS NOW OPERATIONAL

Fig. 1

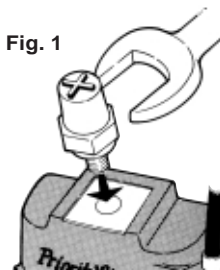


Fig. 2

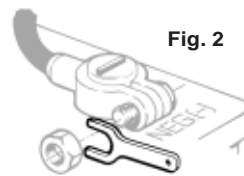


Fig. 3

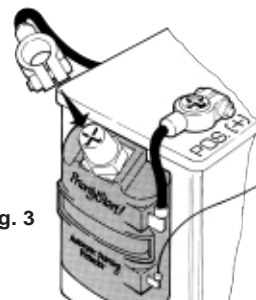


Fig. 4


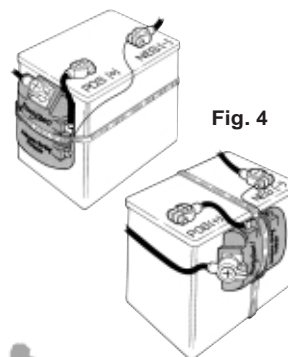


Fig. 5

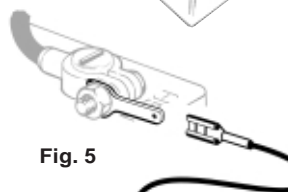

Side-Post Installation

1 Using a 7/8" wrench, take Post Adapter (ITEM B) off of **PriorityStart!**. Tighten firmly into Pos. (+) terminal of battery [Fig. 6]. (Torque @ 7-10 ft./lb. - Do not overtighten)

2 Install Band (ITEM F) around battery. **DO NOT** place **PriorityStart!** under Band at this time.

3 Reconnect Neg. (-) battery cable to Neg. battery post and install U-Clip (ITEM D) securely to assembly [Fig. 7]. **DO NOT** connect Ground Wire (ITEM E) to U-Clip at this time.

4 Connect vehicle Pos. (+) cable securely to **PriorityStart!** [Fig. 8].

5 Connect **PriorityStart!** Red Cable (ITEM C) securely to Pos. (+) terminal (Post Adapter) on battery [Fig. 8].

6 Place **PriorityStart!** under Band (ITEM F). Unit can be installed in vertical or horizontal position [Fig. 4].

7 Connect **PriorityStart!** Ground Wire (ITEM E) to previously installed U-Clip [Fig. 9].

PriorityStart!
IS NOW OPERATIONAL

Fig. 6

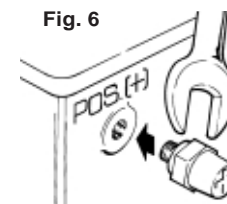


Fig. 7



Fig. 8


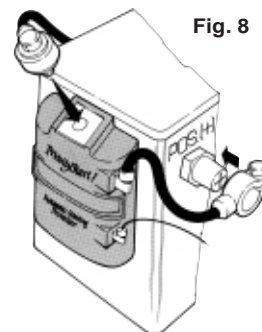


Fig. 9

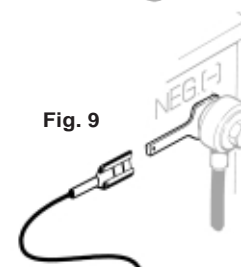

As Final Step, Ground Wire is Connected to U-Clip

NOTES:

- When system disconnects you **MUST** wait one minute before reconnecting.
- During normal operation you may hear the gears engage.
- Reprogram any vehicle memory devices.
- Car alarms can be wired directly to battery, bypassing **PriorityStart!** Note that alarm operation may drain battery.